Client Bridge Quick Start Guide

Step 1: PC Network Adapter setup (*Windows XP*) · Enter [Start Menu] select [Control panel] select [Network].



· Select [Local Area Connection]) icon => select [properties]



Client Bridge Quick Start Guide

· Select [Internet Protocol (TCP/IP)] =>Click [Properties].

🚣 Local Area Connection Properties	? ×
General Authentication Advanced	
Connect using:	
🕮 Realtek RTL8168/8111 PCI-E Gigabi	<u>C</u> onfigure
This connection uses the following items:	
Retwork Monitor Driver	_
Microsoft TCP/IP version 6	
Internet Protocol (TCP/IP)	
•	
I <u>n</u> stall	Properties
Description	
Transmission Control Protocol/Internet Prot wide area network protocol that provides co across diverse interconnected networks.	ocol. The default ommunication
Show icon in notification area when conne	ected
✓ Notify me when this connection has limited	f or no connectivity
0	K Cancel

Client Bridge Quick Start Guide

· Select the [General] tab.

Internet Protocol Version 4 (TCP/IPv4)	Properties ? X
General	
You can get IP settings assigned autor this capability. Otherwise, you need to for the appropriate IP settings.	matically if your network supports ask your network administrator
Obtain an IP address automatical	ly
Ose the following IP address:	
IP address:	192.168.1.5
Subnet mask:	255.255.255.0
Default gateway:	192.168.1.1
Obtain DNS server address auton	natically
Ouse the following DNS server add	resses:
Preferred DNS server:	192.168.1.1
Alternate DNS server:	· · ·
	Advanced
	OK Cancel

EOC1650 does NOT supports [DHCP] function, please select [Use the following IP address] and [Use the following DNS server address].

IP address: 192.168.1.5 Subnet mask: 255.255.255.0 Default gateway: 192.168.1.1 Preferred DNS server: 192.168.1.1

Client Bridge Quick Start Guide

Step 2: Open a browser and go to the following address: 192.168.1.1 with the default user name: admin and password: admin

EnGenius	Wireless A	ccess Point / Client B	ridge
Client Bridge	Main	Reset Home	<u> </u>
Status • Main	System Information	Access Point	
Connection Status System Log	Ethernet MAC Address	00:02:6f:79:5e:15	
System System Properties	Wireless MAC Address	00:02:6f:79:5e:16	
IP Settings Spanning Tree Settings	Country Current Time	N/A Sat Jan 1 00:00:28 UTC 2000	=
Wireless	Firmware Version	1.1.15	
Wireless Security	LAN Settings		
Wireless Advanced Settings	IP Address	192.168.1.35	
Management	Default Gateway	0.0.0.0	
SNMP Settings	DHCP Client	Disabled	
Backup/Restore Settings Firmware Upgrade Time Settings	Current Wireless Se	ettings	
Log	Operation Mode	LIEFE 202 11b/a Mixed	
Diagnostics	Channel/Frequency	2 412GHz (channel 01)	
	Wireless Network		-

EnGenius EOC1650 Client Bridge Quick Start Guide

Step 3: Go to [System Properties] => choose [Client Bridge] => click [Apply]. Wait until the system finish the changing.

EnGeniius	Wireless Access Point / Client Bridge
Client Bridge	System Properties
 Status Main Connection Status System Log System Properties IP Settings Spanning Tree Settings Spanning Tree Settings Wireless Network Wireless Security Wireless Advanced Settings SNMP Settings Backup/Restore Settings Firmware Upgrade Time Settings Log Diagnostics 	Device Name Access Point (1 to 32 Country/Region Please Select a Country Code • Operation • Access Point • Mode • Client Bridge • • WDS Bridge • Client Router

Step4: choose [Wireless Network] => click [Site Survey]



EnGenius EOC1650 Client Bridge Quick Start Guide

Step 5: Choose one of the SSID that you want to connect. Simply click on the BSSID.

Site Survey

EnGenius

Wireless Access Point / Client Bridge

Client Bridge

Status

- Main
- Connection Status
- System Log

System

- . System Properties
- IP Settings
- Spanning Tree Settings

Wireless

- Wireless Network
- Wireless Security
- Wireless Advanced Settings

Management

- Administration
- SNMP Settings
- Backup/Restore Settings
- Firmware Upgrade
- Time Settings
- Log
- Diagnostics

2GHz Site Surv	vey	3	:Infras	truct	ure 💌 :/	Ad_ho
BSSID	SSID	Channel	Signal	Туре	Security	Networl Mode
06:02:6f:54:39:44	EAP3660	2	-46 dBm	G	WPA2	Å
00:04:ed:d3:73:04	FFBnet	8	-74 dBm	G	WPA2	Å
00:02:6f:59:88:61	HotSpot- ECB3500	1	-51 dBm	G	NONE	Å
00:02:6f:54:39:44	interview	2	-47 dBm	G	WEP	Å

Refresh

EnGenius EOC1650 Client Bridge Quick Start Guide

Step 6: Click[Apply] EnGenius Wireless Access Point / Client Bridge Reset **Client Bridge** Wireless Network Home Status Wireless 802.11b/g Mixed (2GHz/54Mbps) - Main Mode Connection Status Specify the static SSID : System Log HotSpot-ECB3500 (1 to 32 characters) System SSID Or press the button to search for any available System Properties WLAN Service. IP Settings Spanning Tree Settings Site Survey : 6F : 59 : 88 00 : 02 1 Wireless Prefer BSSID Wireless Network 61 Wireless Security WDS Client Enable Oisable Wireless Advanced Settings Management Cancel Apply Administration SNMP Settings Backup/Restore Settings Firmware Upgrade

- Time Settings
- . Log
- Diagnostics

Client Bridge Quick Start Guide

Step 7: Go back to step 1. At the last, please select both [Obtain an IP address automatically] and [Obtain DNS server address automatically]. Then [OK]

ernet Protocol (TCP/IP) Prop	perties	?
ieneral Alternate Configuration		
You can get IP settings assigned aut this capability. Otherwise, you need t the appropriate IP settings.	omatically if your network supp o ask your network administrate	orts or for
💿 Obtain an IP address automatic	alya	
Use the following IP address: -		b
IP address:		
Subnet mask:		
Default gateway:		
Obtain DNS server address aut	omatically) a	
Use the following DNS server a	ddresses:	b
Preferred DNS server:		
Alternate DNS server:		
	Advanc	ed
	ОК	Cancel